

Key FOB

General Information:

The Key FOB is a remote control for your **tattletale** base unit. It will arm or disarm your system. The Key FOB can also send an **emergency panic signal** for immediate police dispatch at anytime, system armed or not, by pressing both “*” keys simultaneously. The small red LED light on the FOB indicates that it is sending a signal to the **tattletale** base unit.

Directions for use:

Press “ON” to arm your **tattletale** - you will hear 4 chirps when armed successfully. Press “OFF” to disarm – you will hear 2 chirps when disarmed successfully.

Pressing both “*” keys will send an **emergency panic signal**. The system does not need to be armed to perform this function. The panic signal will cause automatic dispatch of police. **DO NOT** test this function unless you have notified dispatch and placed your account on test.

You can have as many Key FOB's programmed for your **tattletale** as you would like but only 5 can be identified with user codes.

Basic Troubleshooting:

Battery Change: The battery will need to be replaced when the red FOB light no longer works and/or the tattletale based unit no longer chirps when arming or disarming. Replace with a Lithium CR2 battery. Open cover by placing a small flathead screwdriver in the slot on the top of the FOB. Remove battery and replace with new one. Press the black re-set button located on the top left hand corner of the FOB. Close the FOB by aligning bottom edge of the back first and then snapping the case together. Test FOB by arming and disarming and listening for the chirps from the **tattletale** base unit.

When I arm the **tattletale**, why does it chirp rapidly multiple times? This is an indication that a zone is either tripped or needs attention. The system is alerting you to attend to that zone and will not arm until the zone is cleared or the problem is fixed.

Why didn't I get a phone call after sending a panic signal? An **emergency panic signal** causes an automatic police dispatch from the monitoring station. The monitoring station will not call the premise for 20 minutes after receiving the signal to avoid alerting a perpetrator.