


Border Guard - Dual Beam Motion Detector *Outdoor Sensor*

General information

The BorderGuard is designed to protect the exterior of a building or fence. The BorderGuard is a PIR (Passive infrared motion detector) which detects the heat energy emitted by humans. The detector utilizes dual beams that project 40 feet from each side of the unit. Both beams must be blocked at the same time to activate the detector. This feature eliminates the potential of false alarms caused by animals in the outdoor environment.

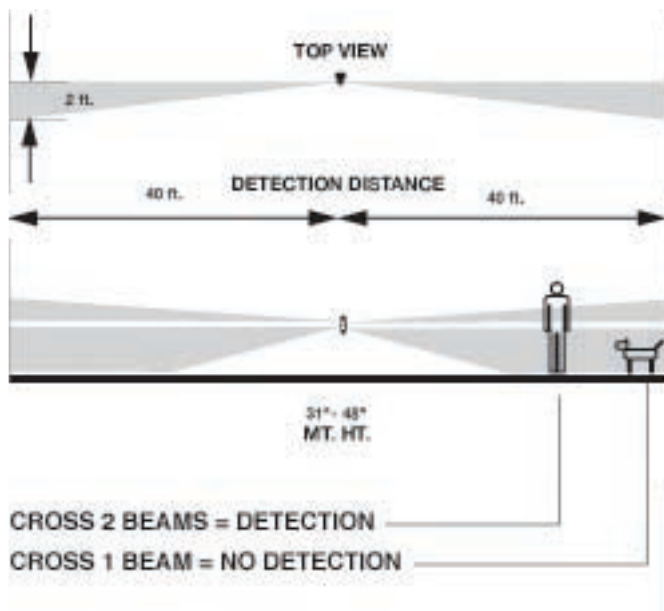

**Protect Anything.
Anytime.
Anywhere.**

Use up to 16 sensors for each tattletale™ alarm unit.

Mounting instructions

- Mount the BorderGuard at a height of 36"-48"
- Screw back casing of the unit to a permanent post or exterior of building.
- reattach body and front cover of sensor.

Changing the battery

If there is a rapidly flashing light on the **tattletale™** alarm unit that corresponds to the zone of your BorderGuard Sensor then you should check the battery. To change the battery:

- Unscrew screw in the middle of the bottom of the unit.
- Remove front cover and pull body out of unit.
- Remove the transmitter from rear pocket of unit, remove transmitter cover.
- Remove the battery and replace with new one. (model# CR123A)
- PRESS THE RESET BUTTON NEXT TO THE BATTERY.
- DO NOT DISCONNECT ANY WIRES.

To test the motion detector

- Mount it in an appropriate location and make sure that it is not in "sleep mode" (see note below).
 - It is usually easiest to unplug the **tattletale™** from power and take it out to where the outdoor motion is located so you can watch the zone light on the tattletale™ as you test the outdoor motion.
 - Make sure the **tattletale™** has been plugged in for at least 3 hours so that it will hold a charge.
 - While holding the tattletale™, walk in the path of the outdoor motion and watch the corresponding zone light on the tattletale™ to make sure that the outdoor motion picks you up.
- In this way, you can also check to make sure that the outdoor motion does not pick up areas that you do not want to protect (i.e. outside of the fence line).

IMPORTANT: The way that the outdoor motion detector preserves battery life for 2-3 years is by going into a "sleep mode" for 3 minutes every time it senses motion. For this reason, it is very likely that if the motion detector does not appear to be working, it is simply in "sleep mode."